


Dukane Portable Presentation Station

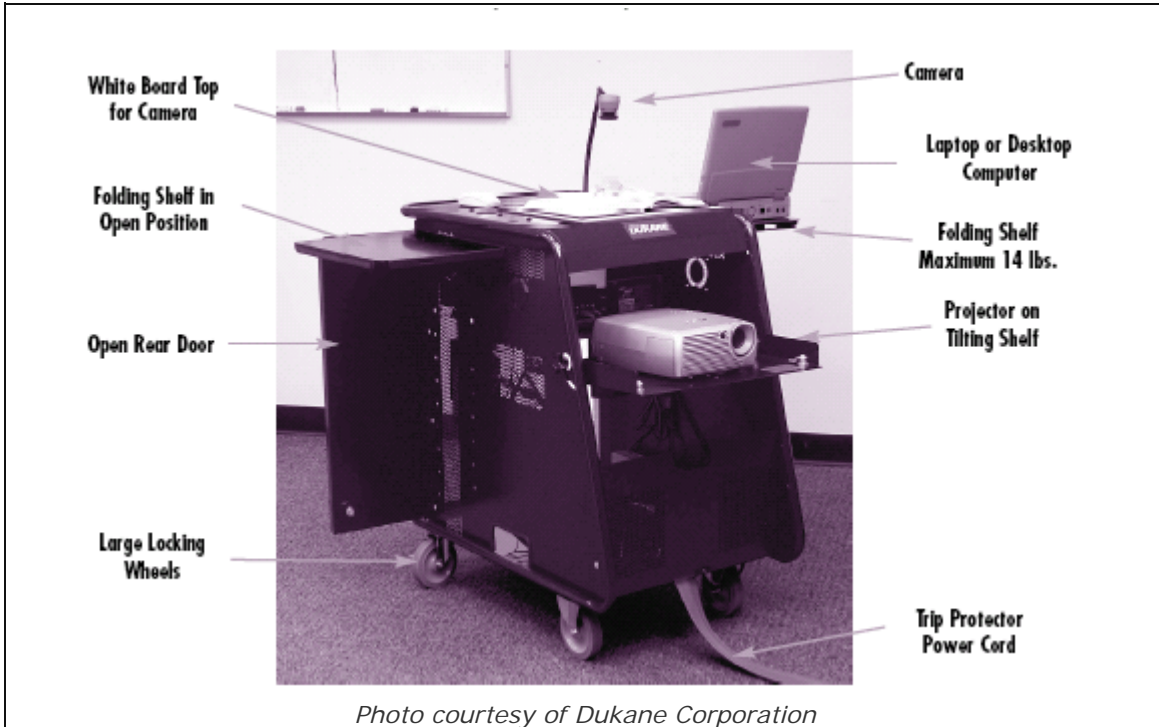

1. Roll the portable presentation station to approximately 3 to 5 feet from the screen.
2. Using the key you were issued, unlock the right rear door and swing open the door.
3. Reach behind the left rear door and unlatch the catch by pulling up on the lever, as indicated on the instruction label on the inside of the right rear door.
4. The side folding shelves can be raised and the supports moved into position for the placement of the station's laptop computer.
5. Unlock the projector-tilting shelf, loosen knobs on the side of cart and swing down into position, tighten knobs. Tip: In some cases, you may have to position the projector at a slight angle in order to project the image on the screen. Position the projector at the best angle and then tighten the knobs to secure the projector.
6. Remove power cord with trip protector from the front of the cart by pulling it through slot at the front base of the mobile station and plug it in at the nearest outlet.
7. If it is not already in position, remove the document camera (Camera 101) from the station's storage area and insert the camera head through the grommet hole in the top of the cart. Place the camera's base on top of the DVD/VCR.
8. Locate the laptop computer in the station's storage area, remove it, and place it on the folding shelf.
9. Connect the computer to the VGA cable, audio cable, and power cord that is coming out of the top of the cart.
10. Power up the presentation station by turning on the switch that is located on the

- power strip inside the station's storage area.
11. You will find the remote controls for the projector and DVD/VCR in the plastic storage drawer in the station's storage area.
 12. The projector remote control is used to power on the projector and switch the inputs to the projector. Point the projector remote toward the projector and press the "POWER" button to turn the projector on. Use the "RGB" button on the remote to project the laptop. Press "VIDEO" on the remote for the DVD/VCR combo. Press "VIDEO" twice to project the document camera.
 13. Use the audio switch to route the audio from either the computer or the DVD/VCR combo to the speakers. The switch is located inside the storage compartment of the station.
 14. Turn the knob on the right speaker to adjust the volume.
 15. Reverse the procedures to store the equipment. **Please ensure the compartments are properly closed and locked. Follow the diagram on the right door to properly secure the doors.**

Note: The above instructions are an adaptation of the instructions provided by the Dukane corporation.