




The LCD Projector Switcher is located in the right compartment of the multimedia station.

Use this device to turn the projector on and off and to switch the LCD projector's input sources.



After locating the LCD projector switcher, press the green button under the label "Projector Power" to power on/off the LCD projector. The green light above the switch will begin to blink.

**Please note:** It will take the projector approximately 90 seconds to warm-up. Additionally, you will not be able to switch input sources until the green light stops blinking.

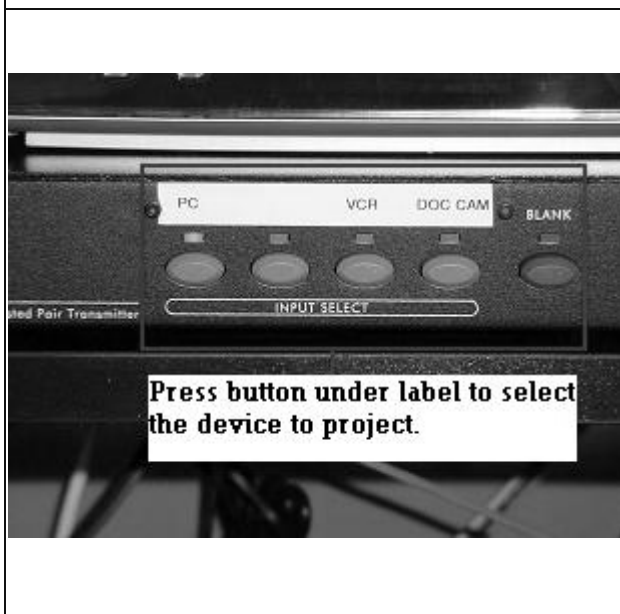

Use the row of buttons on the left side of the LCD switcher to select the input device. Press the button beneath the label to select the device to project.

Input 1 "PC": selects the multimedia station's computer.

Input 2 "Laptop": selects the input for a laptop computer

Input 3 "VCR" or "DVD": selects the VHS/DVD combo player.

Input 4 "DOC CAM": selects the visual presenter (Elmo).

Use "BLANK" to black-out the screen.