




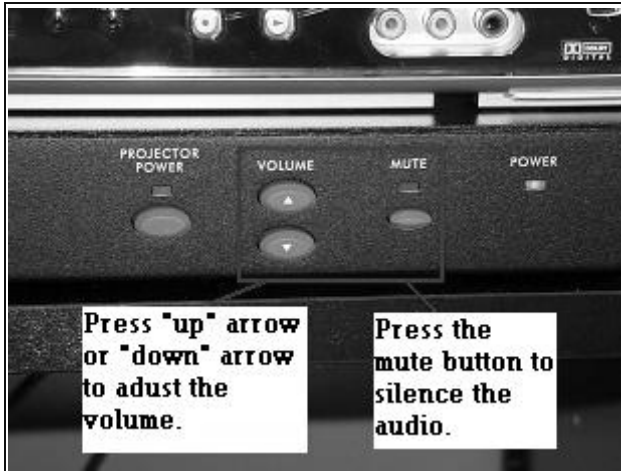




Each station is equipped with a combination VHS/DVD player. You will find the VHS/DVD player in the multimedia station's right compartment.

	<p>First, locate the master power switch to the multimedia station to turn the power "on" and then, locate the VHS/DVD remote control (pictured).</p>
	<p>Located at the top of the remote control you will find the "power," "VCR," and "DVD" buttons.</p> <p>Aim the remote toward the VCR/DVD machine and press "power" to turn-on the unit. Then, press either the "VCR" or "DVD" buttons. Note: press DVD if you are playing an audio CD.</p>

	<p>Use these buttons on the VHS/DVD remote control to "Play," "Pause," "Fast-forward (FF)," "Rewind (REW)," or "Stop" the media you are using.</p> <p>Tip: In "Play" mode, use "FF" to search forward and "REW" to search in reverse.</p>
 <p>Press green button to power on or power off the LCD projector.</p>	<p>To project the VHS/DVD on the screen, turn on the LCD projector using the LCD Projector Switcher.</p> <p>Important: You do not need to turn on the projector if you are playing an audio CD.</p>
 <p>Press button under label to select the device to project.</p>	<p>Then, press "VCR or DVD" on the LCD Projector Switcher. Note: you will need to do this to play an audio CD.</p>



Use the LCD Projector Switcher to adjust the volume of the DVD/VHS player.